

Cupboards & Cabinets User Manual



The following guide shows the steps for using your cabinet for the first time, plus provides care and maintenance recommendations to ensure your unit remains in top condition.


Getting started

1. Position cabinet

- Position the cabinet in the desired location.
- Ensure the cabinet location does not interfere with essential walkways or emergency exits.

2. Level cabinet

- Locate the levelling feet inside the cabinet. Using a flat blade screwdriver adjust the levelling feet so that the cabinet is plumb and level prior to loading.

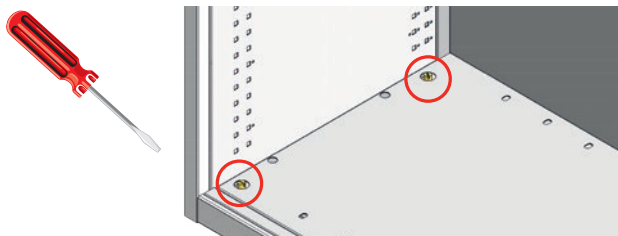

- Each levelling foot allows for a maximum of 20mm of adjustment, the cabinet must not be adjusted further than 20mm from the ground at any point.

3. Fix cabinet as required


- Where the risk of seismic activity is high, or the surface the cabinet is to be placed on is unstable, cabinets taller than 1200h should be secured to prevent them from toppling over. The cabinet should be fixed either to a wall, the floor, or fixed back to back with another cabinet of the same size.

4. Prepare for use


- Remove any tape that has been used to secure shelves and accessories in transit.
- Check that any fitted accessories operate correctly.

5. Adjusting shelves

- Lift the shelf off the shelf clips and remove from the cabinet. This may need to be done at an angle to avoid contact with adjacent shelves or accessories.

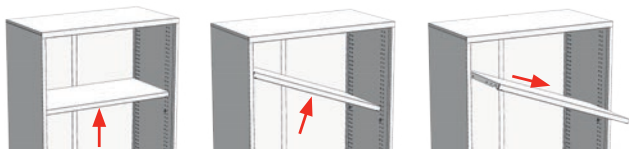

- Reposition the four shelf clips by lifting each clip away from the internal side panel and relocating it to the desired location ensuring the clip is placed back into the same column of square holes. Check that each clip is positioned securely into the hole.
- Reposition the shelf by placing it over the clips and pushing downwards to ensure the shelf engages into the clips correctly.

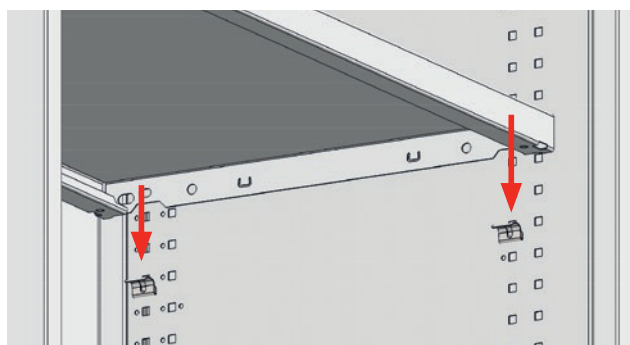

6. Adjusting shelf dividers

- Change the position of the divider by lifting it out of the shelf and repositioning it into the desired hole location.

7. Loading and unloading

- Before loading your cabinet please ensure it is in the correct position, correctly levelled and fixed in place if necessary.
- Never climb on the shelves or onto the top of the cabinet. If you are unable to safely reach the upper levels of the cabinet please use suitable and safe equipment such as a step ladder.
- It is better to evenly load the shelving and accessories, starting with heavier items on the lower shelves and lighter items on the upper levels. The cabinet will be more stable when the centre of gravity is lower to the ground. NEVER store items on the top of the cabinet.
- NEVER overload the shelving and accessories. Shelves and accessories are limited to a uniformly distributed load of 50kg for each shelf and 40kg for each accessory.

8. Moving cabinets

- If relocating the unit all contents must be taken out first, starting with the items at the top of the unit. Cabinets should always be lifted (2 people) or moved with a hand trolley, never drag the unit across the floor.

Care and maintenance

1. Routine Inspection

- Your Strata 2 Cabinets should require little or no maintenance.
- It is recommended, however, that periodic inspections are carried out to ensure the cabinet and accessories are free of damaged components and all mechanical fixings are tight and secure.
- Check the cabinet is sitting level and adjust the feet if required.

2. General Care

- The cabinets should have a periodic clean out and a dusting using a soft cloth and a non-abrasive non solvent based cleaning agent.
- Should the unit need cleaning, either as part of routine or as a result of a spillage, the following guidelines should be observed:
 - The clean should comprise of a wipe down with a damp cloth, using (if required) a mild detergent.
 - NEVER use a hose to spray shelving.
 - NEVER use abrasive or caustic cleaning agents.

3. Individual items

Finish

- Check powdercoat finish for chips or damage, and repair or replace components as necessary.

Door operation

- Open to ensure the locking mechanism is working properly. It may become apparent over time that the key becomes progressively more difficult to insert and/or turn.
- This problem can usually be solved by applying a small amount of graphite powder (available from hardware stores and locksmiths) to the key, then working it in and out of the lock several times.
- Replacement barrels are available from Dexion.

Shelves

- Overloading for shelves may cause permanent deflection; these must be replaced immediately.

Accessories

- Check that all runners are operating correctly and not worn. Each mounting bracket assembly must be firmly secured in to the cabinet with a white nylon push pin.
- Any permanently deflected accessories must be replaced immediately.

Product End Of Life

Your Strata 2 cabinet is made from recyclable materials and at the end of its use the unit should be re-used or recycled. Please refer to the Dexion product stewardship program on our website.



Australia
dexion.com.au
1300 180 358

China
dexion-china.com
+86 21 6879 4410

Hong Kong
dexion.com.hk
+852 2410 8383

Malaysia
dexion.biz
+60 3 5520 6000

New Zealand
dexion.co.nz
0800 800 059

United Arab Emirates
dexion.biz
+971 4 305 0830

Dexion® is a registered trademark of Dexion (Australia) Pty Limited.

Whilst the utmost care is taken to ensure the accuracy of the information contained herein, it is provided in the understanding that the company shall under no circumstances be liable for any injuries, expenses or other losses which may in any way be attributable to the use or adoption of such data and/or design details.

All dimensions indicated are nominal only. Dexion reserves the right to alter or amend without prior notice data and design details specified herein. F•S•A/DCOM0201